


## Undermount Sink Preparation for Naturecast Concrete Counters (preparation is required prior to template)

- 1 Cut an opening in the plywood larger than the belly of the sink so that the sink can move side to side and front to back 1/4".

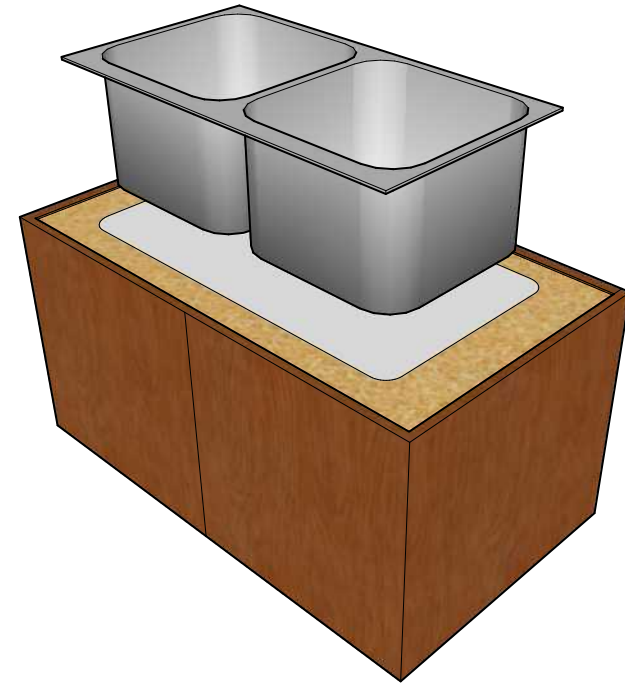

- 2 Recess the plywood down into the cabinet box the amount of the thickness of the flange of the sink so that the top of the sink is flush with the top of the cabinet box.

